

# EX-ROLL




1 Open the back panel to unfold the telescopic pole.



2 Lift the pole into a vertical position and slide it towards the centre of the base.




3 Close the panel, ensuring the pole is positioned correctly.

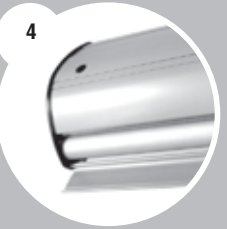


4 Open the front panel.




5 Pull the graphic up from the base.

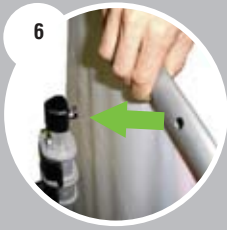

6 Hang the top frame onto the hook.

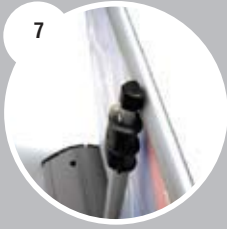

7 Open both clips and raise the pole to the desired height.

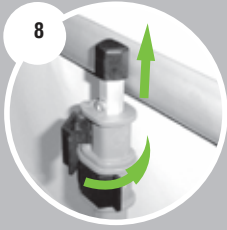

8 Close the clips to lock in place. Close the front panel on the base.

• For more information on changing the image, see instruction leaflet



The ever popular roll-up banner has been innovatively re-engineered to create the dynamic Ex-Roll. The attached telescopic pole and unique fold-away system mean there are no loose parts!

Ex-Rolls are available double or single sided and the images are printed on non-curling material to present a consistently flat image. The images are easily interchangeable offering good value over time.

X-LARGE	▲ Var - 2.7 m (8' 10")	▲ Var - 2.3 m (7' 10")
	▶ 1.5 m (4' 11")	▶ 1.2 m (3' 11")
	📦 8.4 kg (18.5 lb)	📦 7.4 kg (16.3 lb)
MEDIUM	▲ Var - 2.2 m (7' 2")	▲ Var - 2.1 m (6' 10")
	▶ 1.0 m (3' 3")	▶ 0.85 m (2' 9")
	📦 6.0 kg (13.3 lb)	📦 5.0 kg (11.0 lb)



MEDIUM EX-ROLL